

Scene Receiver Packs

Wise Scene Strip Dimming Receiver
12/24V 150/300W



WISESCENE V2STRP

12/24V 150/300W
Quicklink: Q1D2E

General

Construction Plastic
IP Rating IP20

Maximum Addresses 20
Maximum Scenes 64
Per Receiver
Maximum Switches 16
Per Receiver

Minimum Spacing 200mm
Between Receivers
Radio Frequency 868.3 MHz
Range for Metal Switch 50m Max line of sight (subject to installation)
Range for Plastic Switch 100m Max line of sight (subject to installation)

Dimensions

Height 35mm
Length 165mm
Width 47mm

Electrical

Input Voltage 12V DC / 24V DC
Maximum Wattage 300W
Minimum Wattage 1W
Output Voltage 12V DC / 24V DC

The **Wise Scene Strip Receiver** is a 150W 12V/300W 24V dimmer that is controlled by wireless switches or by a push-to-make switch. It can dim 12V DC or 24V DC LEDs. It can be programmed in 4 different ways using our wireless switches:

Option A - Scene Programming

Programming a 7 button switch gives you 4 scenes, master raise/lower and off. A scene is a preset level of light for each circuit in a room. For example, you can have 4 receivers in your living room. Pressing scene 1 on the 7 button switch could give the following;

Downlights = 100%

Wall lights = 80%

Pendant = Off

Low level LEDs = 55%

Pressing scenes 2,3 and 4 can give other preset levels. Any level can be programmed to each receiver.

Option B - Dimming Programming

Programming a 1 button switch gives you on/off with a quick press and dimming up and down while holding the switch. When turning the lights on you can choose to always bring on the lights at 100% or the last dimmed level.

Option C - Switching ON only

Programming a 1 button switch gives you only ON. This function is used to program multiple circuits to ON.

Option D - Switching OFF only

Programming a 1 button switch gives you only OFF. This function is used to program multiple circuits to OFF.

Option E - Three Button Dimming

Programming a 3 button switch gives you raise function on the first button, dimming function on the second button and off function on the third button.

A receiver is not limited to one of the programming options. E.g. you can program a switch for scene control, another switch for dimming and another switch for master ON/OFF.

Wireless Switches and Remotes

A 7 button switch must be used if you require scene setting, Option A. Any button switch can be used when programming options B,C and D. To view other switches click the links on the right of this page, for example Wireless ID switches.

Scene Receiver Packs

Wise Scene Strip Dimming Receiver
12/24V 150/300W

Power Supply

The Wise Scene Receiver requires a 12V or 24V DC power supply. Choose the wattage of the power supply that matches your load.

A wired push-to-make switch will work as a dimmer, Option B.

A Wise Scene Receiver is required for every circuit.

Wise Controls Introduction Video

