

Scene Receiver Packs

Wise Scene Dimming or Switching Receiver
0/1-10V 800W



WISESCENE V20-10

0/1-10V 800W

Quicklink: Q1D8F

General

Construction	Plastic
IP Rating	IP20

Maximum Addresses	20
Maximum Scenes Per Receiver	64
Maximum Switches Per Receiver	16
Minimum Spacing Between Receivers	200mm
Radio Frequency	868.3 MHz
Range for Metal Switch	50m Max line of sight (subject to installation)
Range for Plastic Switch	100m Max line of sight (subject to installation)

Dimensions

Height	35mm
Length	165mm
Width	47mm

Electrical

Input Voltage	240V
Maximum Wattage	800W
Minimum Wattage	1W
Output Voltage	240V + 0/1-10V

The **Wise Scene 0/1-10V Receiver** is a 800W 0/1-10V dimmer that is controlled by wireless switches or by a push-to-make switch. It can dim Fluorescent and LED by 0/1-10V. It can be programmed in 4 different ways using our wireless switches:

Option A - Scene Programming

Programming a 7 button switch gives you 4 scenes, master raise/lower and off. A scene is a preset level of light for each circuit in a room. For example, you can have 4 receivers in your living room. Pressing scene 1 on the 7 button switch could give the following;

Downlights = 100%

Wall lights = 80%

Pendant = Off

Low level LEDs = 55%

Pressing scenes 2,3 and 4 can give other preset levels. Any level can be programmed to each receiver.

Option B - Dimming Programming

Programming a 1 button switch gives you on/off with a quick press and dimming up and down while holding the switch. When turning the lights on you can choose to always bring on the lights at 100% or the last dimmed level.

Option C - Switching ON only

Programming a 1 button switch gives you only ON. This function is used to program multiple circuits to ON.

Option D - Switching OFF only

Programming a 1 button switch gives you only OFF. This function is used to program multiple circuits to OFF.

A receiver is not limited to one of the programming options. E.g. you can program a switch for scene control, another switch for dimming and another switch for master ON/OFF.

Wireless Switches and Remotes

A 7 button switch must be used if you require scene setting, Option A. Any button switch can be used when programming options B,C and D. To view other switches click the links on the right of this page, for example Wireless ID switches.

A wired push-to-make switch will work as a dimmer, Option B.

Scene Receiver Packs

Wise Scene Dimming or Switching Receiver
0/1-10V 800W

A Wise Scene Receiver is required for every circuit.

Wise Controls Introduction Video

